



Kieslect Calling Watch Kr2 Pro User Manual



Get the manual
in more languages

Notes:


1.1 The company reserves the right to modify the contents of this manual without any further notification. It is normal that some functions may vary in certain versions of software.

1.2 Please refer to this manual before using the product.

1.3 Before using the product, you need to connect the APP synchronization time and set your personal information.

1.4 This product supports 3ATM rank waterproof, not suitable for deep sea diving, hot water, tea and other corrosive liquids are destructive to the watch, and will not be able to enjoy the product warranty and free maintenance services.

01 Appearance and charge

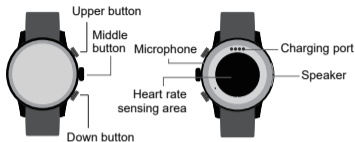

Button functions

Item	Once-press	Double-press	Long-press	Rotate
Upper button	Light screen/ Lock screen/ Home	Custom (Default Activity Log)	Power on/ Power off	/
Middle button	Menu/ Back	/	/	Page flipping/ Volume adjustment/ Screen Brightness Adjustment
Down button	Custom (Default Sport Mode)	Voice assistant	SOS	/

Tips:

- 1.Charging no less than 2 hours before using. Please use the correct charging adapters which are 5V 0.5A above.
2. If the watch cannot be turned on after being placed for a long time, you need to wipe the charging contacts of the charging cable clean when using it again to avoid sweat or water residue.

02 How to wear

Please wear the device on your wrist correctly, about one finger from the carpal and adjust it to comfortable position. Below pictures as reference.



Tip: Incorrect wear can result in inaccurate health test data.

03 Download & connect to APP

03.1 Scan QR code





03.2 Install the "Kieslect" APP






Kieslect

03.3 Open App, Click “ Add device now ” -Click “ Kr2 Pro ” to connect - then Click “ ✓ ” on the watch.



03.4 Click “ Agree ” to connect with Audio Bluetooth.



Tip: The above operations are performed using the Apple system, but there are slight differences when using the Android system. Please follow the connection instructions on the APP to connect.

03.5 Check the connection status.



*Using BT call and playing music feature on the watch must be successfully connected to audio Bluetooth.

For further information about the settings and usage of watch, please visit:

<https://www.kieslect.com/guide/user-manual/>

Tips:

- (1) Please upgrade the App to latest version to get a better experience.
- (2) Andorid 5.0 and iOS 9.0 or above system are compatible with the App.
- (3) For the first time connection with android , "Permissions" reminder will pop-up, please follow up the guidance and allow permissions to ensure all functions working properly.
- (4) To connect successfully, please turn on mobile phone's Bluetooth, GPS and network.
- (5) If the device cannot be searched or connected during use, please reset or turn off the watch to try again.
- (6) You can't turn off your Watch while it's charging. To turn off your Watch, first disconnect it from the charger.
- (7) If you need to use the functions such as message push, make sure that the App switch is on.

The specific operations are as follows.

a.Open the "Kieslect"App



b.Select the "Device"



c.Select the "Turned on"



04 Operating Instructions

a. Press the mid button from watchface main page to enter menu list, press again the mid button to back.



b. Shortcut page: Slide down from main page, go to shortcut, and slide up to return.



c. Information page: Slide up from main page, go to information, and slide down to return.



d. Open the shortcut interface: Slide the watch main face to the left, and sliding continues to show more shortcuts. Long press the function interface to enter the component editing interface to remove or add functional components.








e. Split- screen browser: Slide right from the main page to enter into split-screen. Long press the function icon in the split-screen and you can customize your function icons in the area.



f. Change the menu style: Slide down based on watchface main page and click "☰" to change menu style. 3 style "list" or "waterfall flow" or "chessboard" for your options (You can also go to settings to switch)



05 Function introduction

 The image shows a circular interface for the 'Workout' app. At the top, the word 'Workout' is written in green. Below it, there is a 'History' button with a right-pointing arrow. In the center, there is an orange running person icon and the text 'Outdoor running'. At the bottom, there is a 'No goal' indicator.	<p>Workouts: Support 100 sports modes And sports broadcasts, you can view heart rate,calorie consumption, steps, distance, pace, stride frequency, heart rate zone and training effect.</p>
 The image shows a circular interface for heart rate monitoring. At the top, it says 'Heart rate'. Below that is a red bar chart representing heart rate over time. At the bottom, it says 'Measuring...' and '78 bpm'. There is also a small red heart icon and the text '8:10am (3min ago)'.	<p>Heart Rate: 24H heart rate monitoring set monitoring time interval and heart rate alarm threshold in the App.</p>
 The image shows a circular interface for 'Sports Records'. It features a central green number '5660' surrounded by four colored segments: orange (top), yellow (left), teal (bottom), and light blue (right). Each segment has a small circular icon and a number: 1500, 1500, 25.00, and 1500 respectively.	<p>Sports Records: Record daily sports data, including steps, distance, calories, sports hours.</p>
 The image shows a circular interface for the 'Telephone' app. At the top, it says 'Telephone'. Below that are three menu items: 'Recent calls' with a green speech bubble icon, 'Contact' with a green person icon, and 'Dial pad' with a green grid icon.	<p>Phone: Connected to the mobile phone via Bluetooth, it can dial, answer, and hang up calls, and support viewing call records and a list of common contacts.</p>
 The image shows a circular interface for 'SpO2' monitoring. At the top, it says 'SpO2'. Below that is a red circular icon with a pulse line. At the bottom, it shows '96%' in large white text. Below the percentage are two smaller percentages: '98%' with a red arrow pointing up and '92%' with a green arrow pointing down.	<p>Blood Oxygen: 24H monitor blood oxygen status, and automatic monitoring can be turned on in the App.</p>



Breathe: Set the breathing rhythm and time, and follow the training prompts to complete the breathing training.



Stress: 24H monitor pressure conditions, and automatic monitoring can be turned on in the APP.








Physiological Cycle: Set the personal information to "female" on the APP, and click "Me" and "Physiological" on the APP to set the data. You can see the corresponding safety period, menstrual period, and ovulation period reminders on the watch side.











AI Voice: Click the AI voice to say the function you need to wake up. (Note: The watch needs to be connected to the mobile phone via Bluetooth and the phone page must be unlocked before it can be used.)



Games: 4 build-in games. "Flappy bird" & "2048" & "Dice" & "Air combat" .

	<p>Emotion: Pleasure, calm, anxiety irritability, 4 kinds of emotions are accurately detected.</p>
	<p>Camera Control: Open the App after connecting to the mobile phone, the watch can remotely control the mobile phone to take pictures, and set the delay time and the number of continuous shots.</p>
	<p>Music: After connecting to the App, you can click "play /pause/previous/next song" on the smart watch to control the music from mobile phone, and the volume can be adjusted.</p>
	<p>Sleep: Intelligently monitor your sleep status and quality, record data and scientifically analyze sleep time.</p>
	<p>Alarm: 10 alarm reminders can be set.</p>

 <p>16:30 Focus time 25 Min > Start</p>	<p>Pomodoro Timer: You can set your own time, start "focus on work" to complete the reminder, and then "take a break" to complete the reminder.</p>
 <p>Huangpu 26°C Max:30°C Min:20°C Air quality 38-Excellent</p>	<p>Weather: After connecting the mobile phone, open and set the weather function in the App, the watch can display the weather information in recent days.</p>
 <p>Tap to turn on</p>	<p>Flashlight: Turn on the flashlight to illuminate the environment, and then click the flashlight page to turn it off.</p>
 <p>123 AC % . + 7 8 9 - 4 5 6 × 1 2 3 ÷ 0 =</p>	<p>Calculator: It supports simple calculation functions and can perform basic calculations such as "+", "-", "*", "÷".</p>
 <p>Add cities through app</p>	<p>World Clock: It supports the addition of 10 sets of different national regional time, which can be added and deleted by yourself. Please go to Kieslect APP settings.</p>

	<p>Timer: can be set by yourself for 1 minute/ 5 minutes, 10 minutes and other time.</p>
	<p>Stopwatch: Support 20 sets of time records.</p>
	<p>Settings: Watch faces&time, Display, Sound & Vibration, User preferences, System.</p>
<p>Other functions</p>	<p>Massive Online/Custom Watch Faces, Raise To Wake,Hand Down To Turn Off The Screen,Find Phone, Find Watch,Do Not Disturb Mode, Theatre mode, Brightness Adjustment, Button Down Function Customization, Push of information, SOS, Various Prompt Sounds, etc.</p>

Tips:

- 1: More detailed information analysis and records can be viewed in the App.
- 2: The above health data are for reference only and cannot be used as a medical basis.

06 Parameters

Bluetooth: 5.3

Screen Size: 1.58"

Waterproof: 3ATM

Net Weight: 39g

Battery Type: Li-ion

Size: ϕ 46.4*11.65mm

Charging Voltage: 3.8V

Battery Capacity: 360mAh

WorkingTemperature: -20°C~60°C

07 Warranty

1. One year warranty for default hardware defectives, half of year for battery and charging cable.
2. Below reasons cause to defectives are not included in free warranty service:
 - (1) Personal assemble or disassemble.
 - (2) Falling damage during use.
 - (3) All man-made damage or due to the third party's fault, improper use (Such as: water in the smart watch, external force shattering, scratch during use etc.)
3. Please provide a warranty card with the details filled when request for after selling service.
4. Please contact with direct dealers for warranty service.
5. Please note all functions of the product are based on physical objects.

Warranty Certificate			
Client Info			
Product Type		Vendor	(Stamp)
Client Name		Contact Info	
Vendor's Contact		Purchase Date	
Product SN Code			
Client's Address			
Vendor's Address			
Warranty Record			
Date	Problems	Diagnosis	More Info

Contact us: service@kieslect.com

IEC/EN 62133-2:2017

AnnexC(informative)

Recommendations to the end-users

The following represents a typical but non-exhaustive, list of good advice to be provided by the equipment manufacturer to the end-user.

- a) Do not dismantle open or shred secondary cells or batteries.
- b) Keep batteries out of the reach of children.
- c) Battery usage by children should be supervised. Especially keep small batteries out of reach of small children.
- d) Seek medical advice immediately if a cell or a battery has been swallowed.
- e) Do not expose cells or batteries to heat or fire. Avoid storage in direct sunlight.
- f) Do not short-circuit a cell or a battery. Do not store cells or batteries haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by other metal objects.
- g) In the event of a cell leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- h) Do not use any charger other than that specifically provided for use with the equipment.
- i) Do not use any cell or battery which is not designed for use with the equipment.
- j) Always purchase the battery recommended by the device manufacturer for the equipment.
- k) Keep cells and batteries clean and dry.

- l) Secondary cells and batteries need to be charged before use. Always use the correct charger and refer to the manufacturer's instructions or equipment manual for proper charging instructions.
- m) Do not leave a battery on prolonged charge when not in use.
- n) After extended periods of storage, it may be necessary to charge and discharge the cells or batteries several times to obtain maximum performance.
- o) Retain the original product literature for future reference.
- p) Use the cell or battery only in the application for which it was intended.